




LBZ Alternate Firing Cam Wiring Instructions

- **Factory Firing Order: 1-2-7-8-4-5-6-3**
- **Alternate Firing Order: 1-5-6-3-4-2-7-8**

The connectors are the 2 large ones on the drivers side valve cover, the pin swap will be done on the body harness side not the engine harness side. See connectors below.

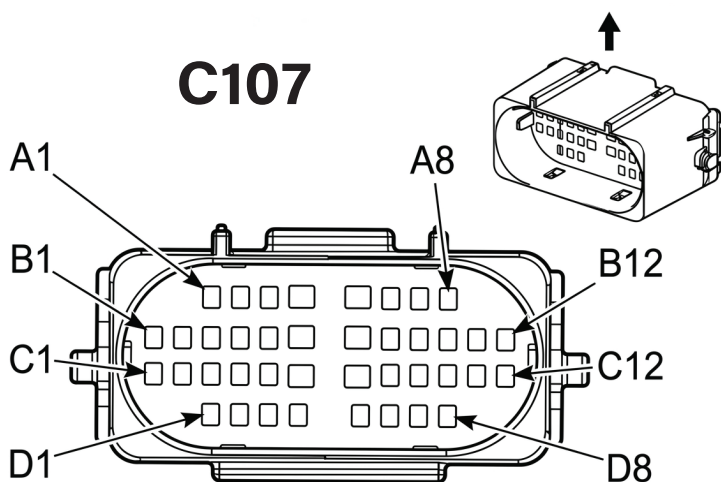

Connector C107 38 Pin Connector, switch the following pins:

B6 (Pink w/ Black Stripe) with **A5** (Dark Blue w/ White Stripe)

A4 (Light Green w/ Black Stripe) with **B7** (Tan w/ White Stripe)

Fuel Rate Programing Instructions:

The injector in location Cylinder 1 will have its flow rate entered into Cylinder 1 on your programming tool.


The injector in location Cylinder 5 will have its flow rate entered into Cylinder 2 on your programming tool.

The injector in location Cylinder 8 will have its flow rate entered into Cylinder 3 on your programming tool.

The injector in location Cylinder 4 will have its flow rate entered into Cylinder 4 on your programming tool.

The injector in location Cylinder 2 will have its flow rate entered into Cylinder 5 on your programming tool.

The injector in location Cylinder 7 will have its flow rate entered into Cylinder 6 on your programming tool.

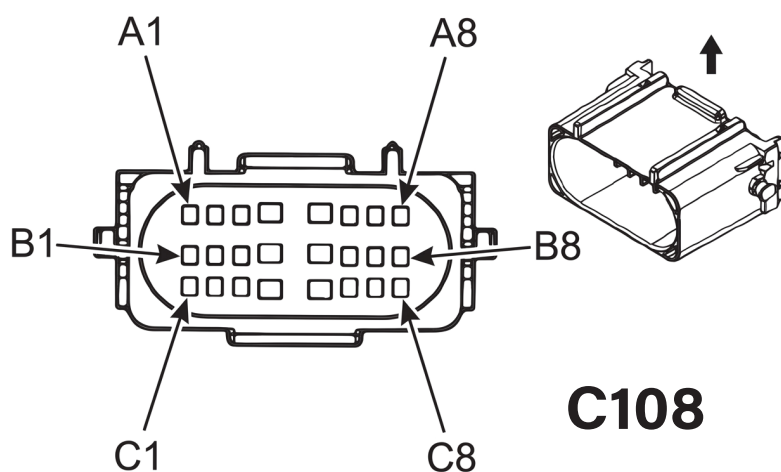

Connector C108 24 Pin Connector, switch the following pins:

A5 (Yellow w/ Black Stripe) with **B5** (Orange w/ Black Stripe)