



LLY Alternate Firing Cam Wiring Instructions

- **Factory Firing Order: 1-2-7-8-4-5-6-3**
- **Alternate Firing Order: 1-5-6-3-4-2-7-8**

Injector Command Wires for 2, 3, 5, 7, 6, 8 need to be switched at the fuel injector control module, FICM

For 2 & 5:

Swap FICM Connector 2 **Pin 121** (White / Yellow) with FICM Connector 2 **Pin 116** (Red / Light Green)

For 3 & 8:

Swap FICM Connector 2 **Pin 115** (White / Light Blue) with Connector 2 **Pin 120** (White / Green)

For 6 & 7:

Swap FICM Connector 1 **Pin 59** (Dark Blue / White) with FICM Connector 1 **Pin 61** (White / Red) and swap Connector 1 **Pin 60** (Dark Blue / White) with Connector 1 **Pin 62** (White / Red)

